

STONE MASON[®]

WALL FINISH TEXTURE COAT™



Long-Lasting, Ready Mixed, 100% Pure Acrylic Polymer Decorative Coating

Stone Mason Wall Finish Texture Coats provide a unique, beautiful finish for residential wall surfaces for both new construction and renovations. Use them to protect and beautify exterior walls and exposed foundations. Also very attractive and practical when used as a basement wall finish, or as a wall covering in combination with wallpaper or paint. Imagine the possibilities as a distinctive entranceway, stairway, den or family room. And it is so easy to use.

Choose from 3 Textures and Many Colors



Venetian Pebblecoat Freeform

Textures above available in a basic white, which can be used "as is" directly from the pail, or tinted to any of a wide range of decorator colors. (See chart on other side of page)

Color tinting of your Stone Mason Wall Finish Texture Coat is done professionally and expertly in the Paint Department of this store.


Flexible • Water Resistant • Ready to Use

Use with Masonry, Concrete, Concrete Block, Stucco, Cement Backer Board, Brick and Gypsum Board (Interior Only)



Exterior Use For: •Exterior Walls •Retaining Walls •Residential Foundations •Renovating a Garage •Updating a Shed and More

Interior Use For: •Walls for a Basement Room •Entranceway Decor •Stairways • Family Room or Dining Room in Combination with Wallpaper or Paint

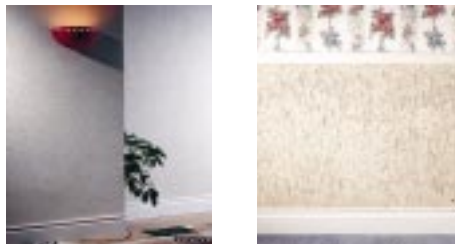

REMINDER - This Is What You Need To Do A Good Job

- Stone Mason Wall Finish Prime Coat
- Stone Mason Wall Finish Base Coat
- Stone Mason Wall Finish Texture Coat
- Power Mixer, Paint Paddle
- Trowel — Stainless Steel or Plastic
- Sponge Float • Paint Roller/Brush
- Texture Spray Gun (Optional) • Drop Sheets

WISE TIPS •Use a small test area to develop the technique required in order to obtain the desired texture.

- Use only stainless steel or plastic trowels to avoid staining.
- To eliminate lap marks, maintain a "wet edge" at all times, working continuously to complete sections. Work in area segments of approx. 1.8 m² (4'x5').
- Start from upper area and work down using upward trowel motions.

- Clean tools **frequently** during application.
- Do not re-trowel over completed area. For corrections re-apply, application steps 2 to 5 in 24 hours.
- **Alternate application:** use standard texture spray equipment. Spray texture coating using approx. 15-18 psi, 1 m (2-3 feet) away from wall surface, using large orifice.



For Total Satisfaction and Reliability, Depend on Our Superior Home Decor and Repair Products.

Stone Mason Wall Finish Texture Coat™ is a decorative and protective product for exterior and interior wall surfaces. Use it in conjunction with Stone Mason Wall Finish Base Coat™ and Stone Mason Wall Finish Prime Coat™. We also offer a full line of quality, easy-to-use home repair and maintenance products designed to protect and add value to your home.

IMPORTANT INFORMATION

Substrates: Masonry, concrete, concrete block, stucco, cement backer board, brick and gypsum board (interior only). Surface must be structurally sound. All expansion joints must be respected. Refer to ACI Guide to Portland Cement, Plastering & Stuccoing, when applying to different substrates. Make sure guidelines are followed for expansion joints. Copy available at local retailer.

Limitations: Apply only in temperatures above 4°C (40°F) and they must remain above this level for at least 24 hours.

Do not apply on exterior if rain is forecast within 24 hours.

Avoid application in direct sunlight when possible.

Dries in 24 hours at 13°C (55°F) and 65% relative humidity.

Clean-Up: Clean with warm water while finishes are still wet.



Surface Preparation



STEPS 1 & 2

1. Clean area free of dirt, dust, loose debris, paint or any contaminants.
2. Repair and fill any cracks and holes using Stone Mason repair products. Moisten concrete with clean water prior to application of Stone Mason Wall Finish Base Coat.



STEP 3

3. To obtain a professional finish, the Texture Coats must be applied over a smooth and level surface. Irregular surfaces such as concrete, concrete block, brick, etc. must receive a base coat of Stone Mason Wall Finish Base Coat. Allow 24 hours to cure.



STEP 4

4. Apply Stone Mason Wall Finish Prime Coat over area to be covered with Stone Mason Wall Finish Texture Coat. This will provide a uniform base color, extend working time and promote better adhesion of Texture Coats. Let dry for approximately 2 hours.



MIXING: Although the product comes to you ready to use, it is important to thoroughly mix Stone Mason Wall Finish Texture Coat to a uniform workable consistency. A power drill with paint mixer attachment is recommended.

Note: Clean tools regularly during application. Note: The Venetian and Pebblecoat textures are achieved by using a light, uniform circular and/or vertical motion. The Freeform texture provides the opportunity to create unique and dramatic patterns using a variety of tools, trowel motions and techniques on single or multiple coats.

Texture Coat Application



STEPS 1 & 2

1. Use a small test area to develop the technique required in order to obtain the desired texture.
2. Use a stainless steel or plastic trowel to lay material on wall surface.



STEPS 3 & 4

3. Spread to thin even thickness. Recommended minimum thickness for Venetian and Pebblecoat is 1.6 mm (1/16") and for Freeform 3.0 mm (1/8").
4. To eliminate lap marks, maintain and work from a wet edge at all times.



STEP 5

5. **Texturing.** Interesting and unique texturing effects can be created by a uniform trowel motion and/or type of tool used to create the texturing. It should be textured within 10-15 min. of applying Stone Mason Wall Finish Texture Coat.



Alternate Application: Another suggested application of the texture coat is a spray-on method for those who do not wish to use a trowel. Stone Mason Wall Finish Texture Coat can be sprayed on utilizing a standard hopper spray unit. Each of the three finishes has a little different consistency and we suggest you use a small test area to develop the technique required to obtain the texturing consistency you seek. Spray texture coatings using approximately 15-18 psi, 1 m (2-3 feet) away from wall surface. Upon completion, then proceed with the various trowel motions to obtain required texture.

Wall Finish Texture Coat Color Chart

The paint department of this store will mix the color you want from this color chart.

100 Porcelain	200 Shortbread	300 Sand Dune	101 Bone
201 Newport Beach	301 Peach Fuzz	102 Dusty	202 Butternut
302 Nautilus	103 Taupe	203 Dijon	303 Cookie Dough
104 London Fog	204 Mexican Gold	304 Latte	105 Daytona
205 Rainbow's End	305 Lox	106 Honeynut	206 Tawny
306 Caramel Apple	107 Porridge	207 Split Pea	307 Sienna
108 Mortar	208 Honey Brown	308 Baked Peach	400 Cherub
500 Arctic Ice	600 Charcoal	401 Bubble Bath	501 Aqua Frost
601 Chutney	402 Mauve	502 Icy Mist	602 Blue Ink
403 Conch Shell	503 Newman Blue	603 Glacier	404 Scallop
504 Sargasso Sea	604 Apricot Cream	405 Baby Cheeks	505 Cool Mint
605 Pink Twilight	406 Raspberry Cream	506 Dolphin Blue	606 June Sky
407 Coppertone	507 Deep Water	607 Adobe	408 Twig
508 Seattle Green	608 Stringbean		

Due to the variations possible when printing colored inks on paper, these colors are offered ONLY as a guide. Actual colors may vary slightly.

Water Based • Premixed and Tintable • Paintable • Flexible • Water Resistant • Ready to Use

U.S.E. Hickson Products Ltd.

15 Wallsend Drive, Scarborough, Ontario, Canada M1E 3X6

Phone:(416)724-2000 • FAX:(416)724-6818 • Visit us at: www.usehickson.com

